可用

















Battery connections the battery cable and the con ic Pie. Make sure the arrows WARNING!






Please check the polarity of the battery and cables properly! Short circuiting or reverse polaritizing may cause permanent dama e

To Battery

To Motor

ルドロータ ロータラン 8-Pin Interface wiring diagram

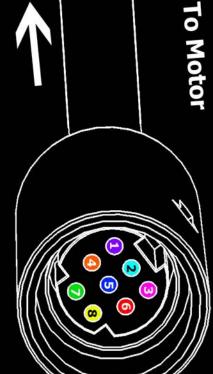


5)Brake Switch 6)Throttle and Pedelec (+5V Supply 7)Cruise Control Buttor 8)Battery Positive supply for LEC lights and battery gauge

1)Reverse Function
2)Negative (Ground) |
3)Pedelec (Signal)

stThe reverse function can only be used in Magic Pie 1.1 or higher.

LED Light Connection Diagram

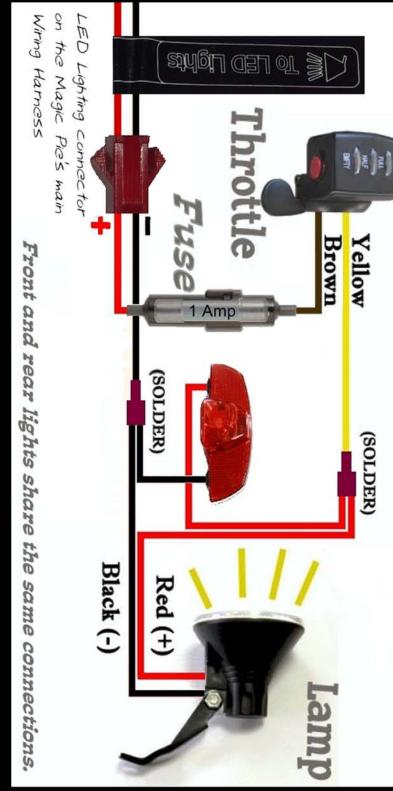

Front and rear lights share the same connection

