

## LCD Setting Instruction(ZANNX-JY017)

**1:According to schematic table, fix wires to controller.**

**2: First press H .Secondly open the power.**

**Just wait for 1.2.3.4 seconds ,then press to L (wait 1 second),back to H.**

**(L-H)**





**3: Step 1: Choose the battery voltage,**

**24V, 36V,48V,60V,72V**



4: Press L , choose 36V for example. L(wait 1 s"),back to H, quickly to L,Then H. (H-L-H, quickly)

Step 2: Choose wheel size,

08",10",12",14",16",18",20",22",24",26",28"



5: Press L , choose **24" wheel size** for example. L(wait 1 s"),back to H, quickly to L ,Then H. (H-L-H, quickly)

Step 3:The pole of magnet in motor

02 pairs,04 pairs,08 pairs,12 pairs,,16 pairs,18 pairs,20 pairs,22 pairs,23 pairs,24 pairs,26 pairs





6: Press L , choose **20 pairs -pole of magnet** for example.

Finally, Save (stop),Done



Specification may change without prior notice;

All Rights reserved Zannx